


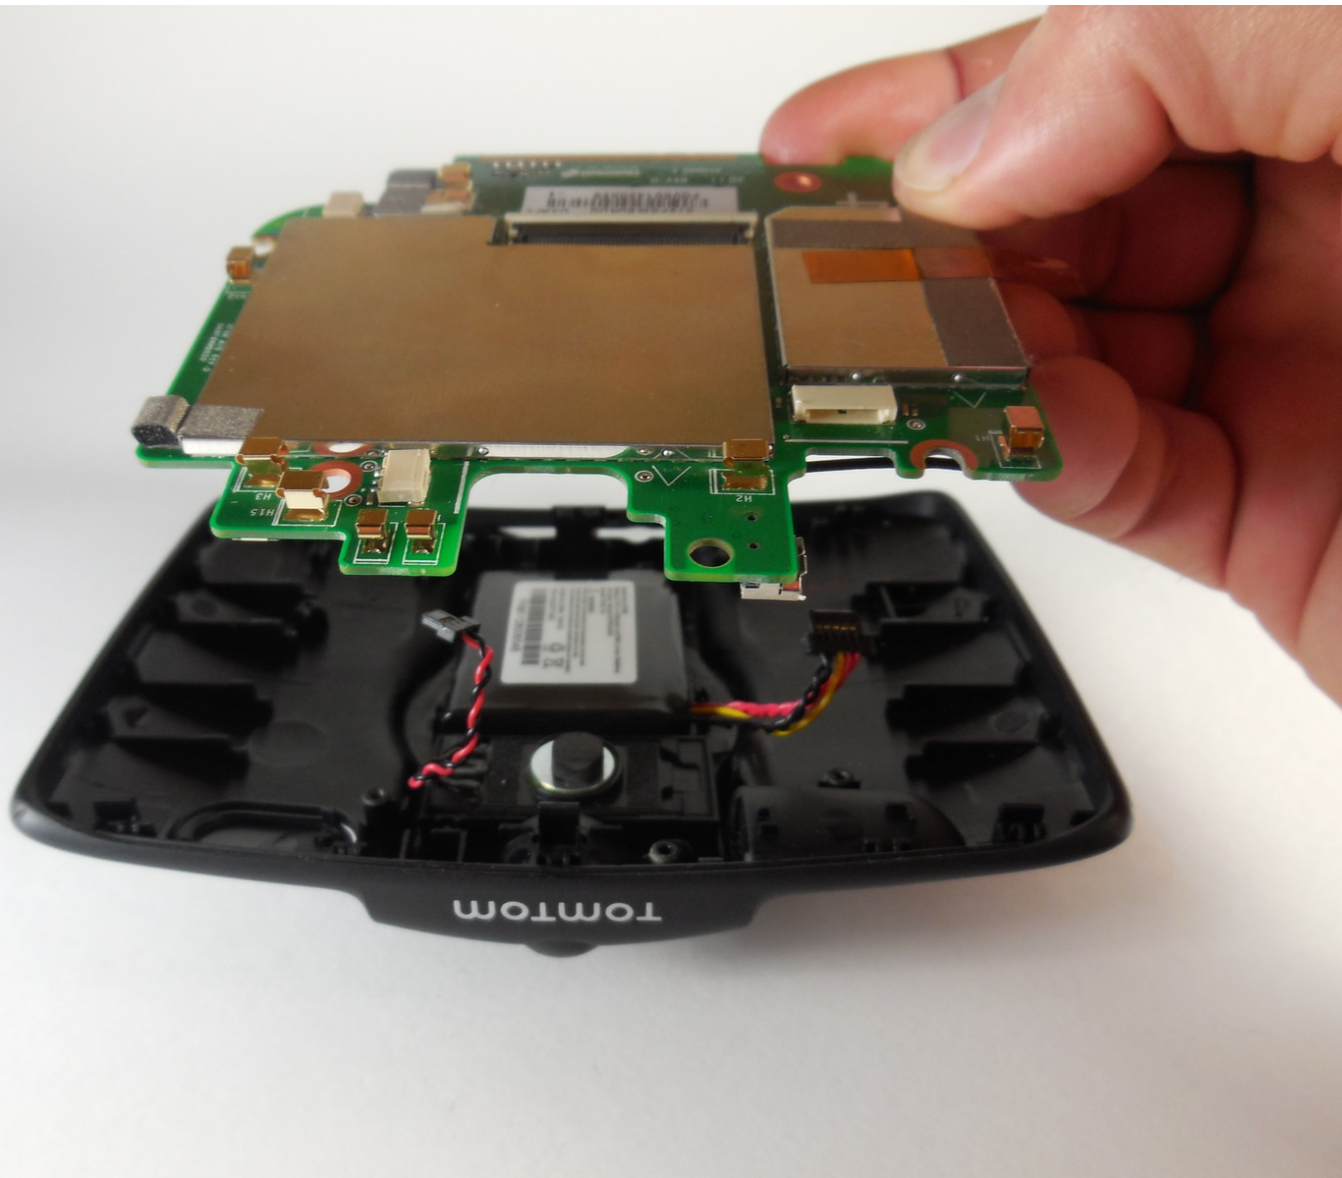

# TomTom GO Live 1535M Logic Board Replacement

In this guide we will disassemble the device to remove the logic board so it can be replaced.

Written By: Mathias Sagide





## TOOLS:



- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [64 Bit Driver Kit](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Screen



- Slip a small opening tool underneath the screen, gently sliding it around the outside edge.
- ⓘ It may be easier to start at the corners.


## Step 2 — Cables

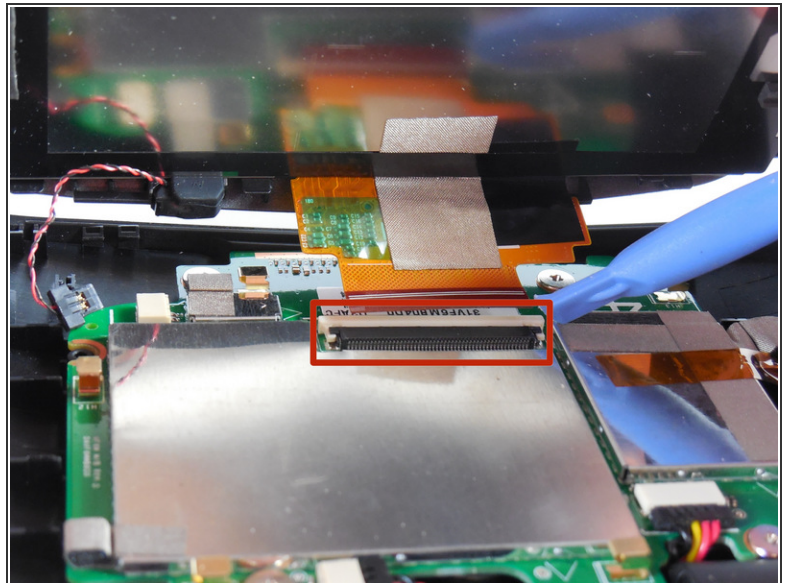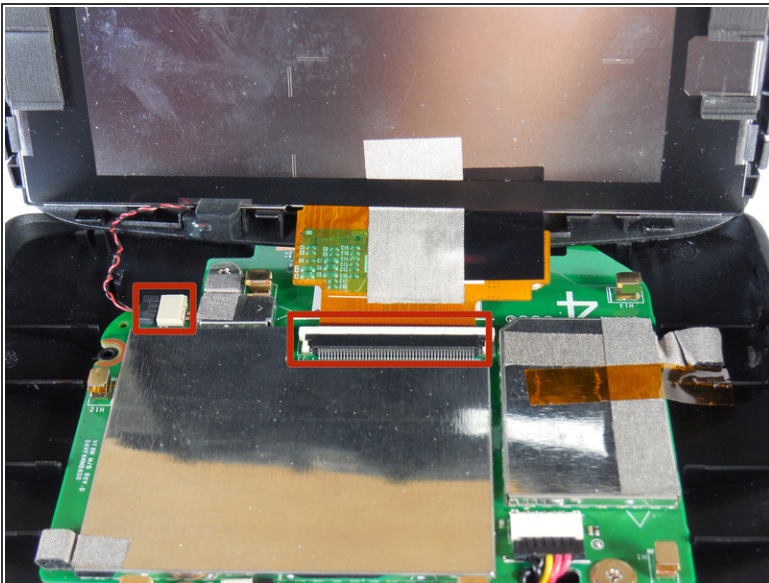

- Carefully remove the reset button cable (located on the left) and the ribbon cable.
- Remove the screen and set it aside.




## Step 3 — Logic Board Cables

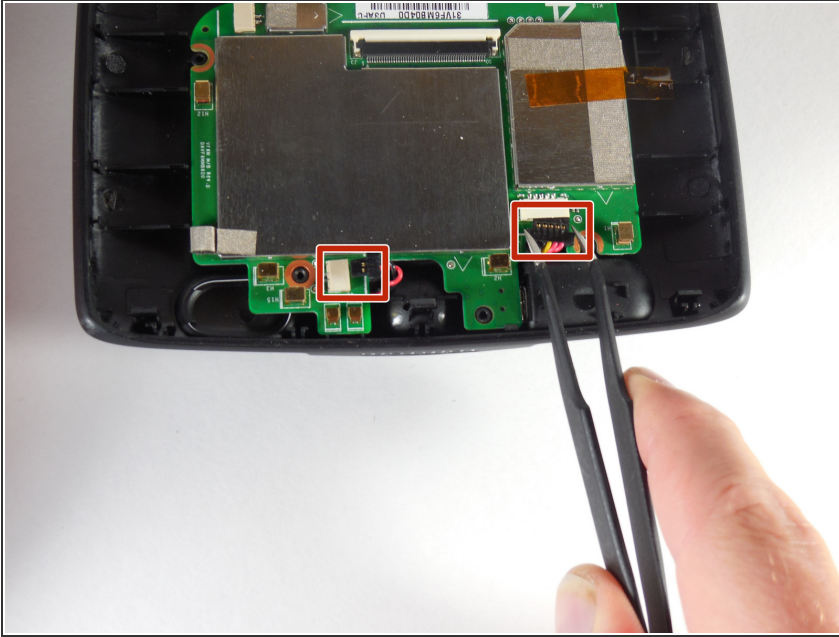

- Remove the logic board cables.

⚠ We highly advise that a pair of tweezers are used for this step to ensure no part is damaged.

## Step 4 — Screws

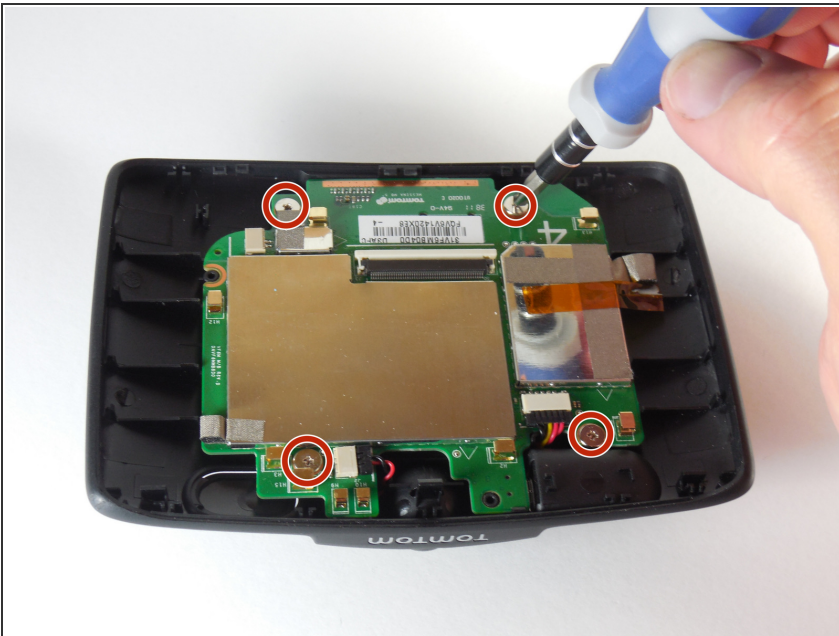

- Remove the 3.6mm screws with a Phillips Screwdriver.
- After removing the screws simply lift the logic board from the base.

To reassemble your device, follow these instructions in reverse order.